


Newel Post Installation Guide Concrete Surface (INS-BN)

1. Mark the center of the location where the Newel Post will be installed and drill a 5/8" diameter hole on the balcony. Insert the concrete head in the hole and screw the threaded rod in it.
2. Slide the newel post on the threaded rod (threaded rod should go through the post and the transverse aluminium pipe).
3. Place washer and screw tarot onto threaded rod. Tight well.
4. Install cap with caulking.

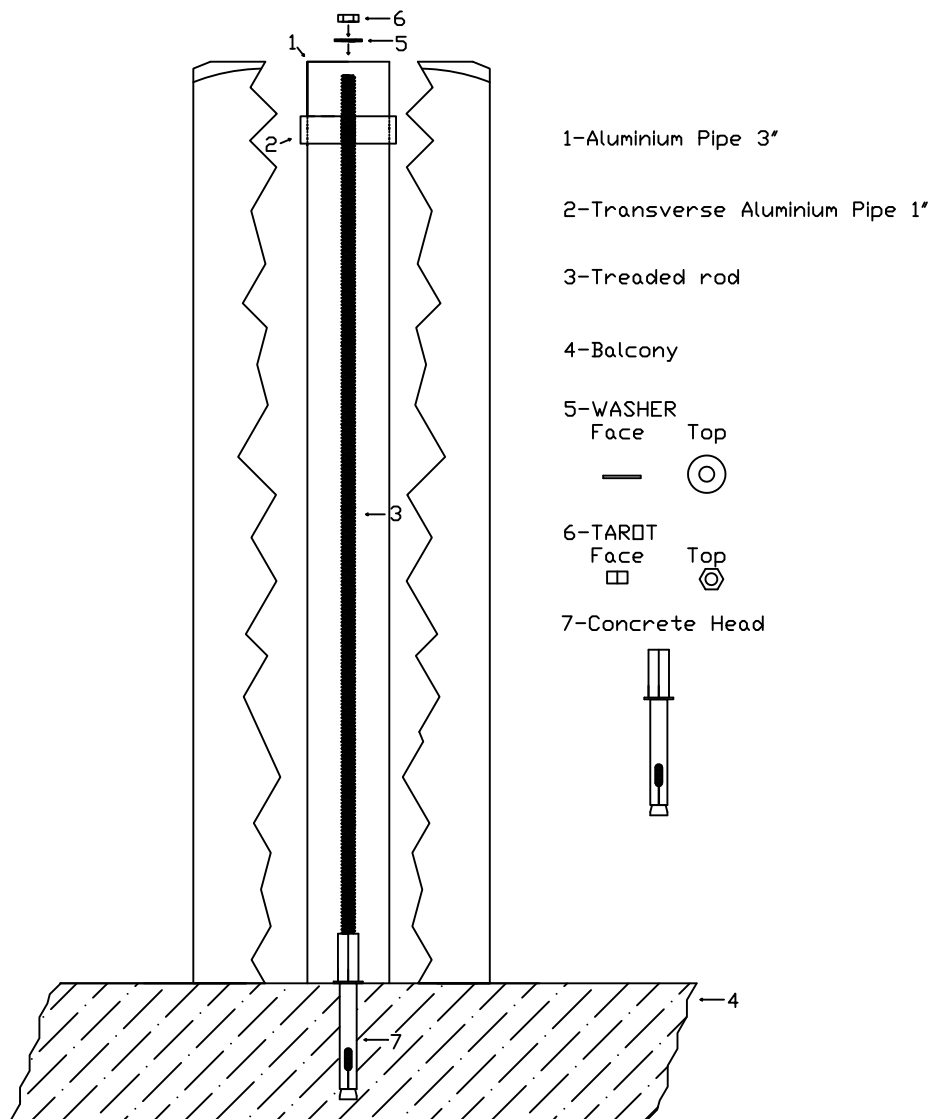

The warranty will be void if the installation instructions are not followed.