


Newel Post Installation Guide

Wood Surface with access under the floor (INS-BSA)

1. Mark the center of the location where the Newel Post will be installed and drill a ½" diameter hole on the balcony.
2. Place the newel post over the hole and slide the threaded rod through the newel post and hole (threaded rod should go through the post and the transverse aluminium pipe).
3. Place washer and screw tarot onto threaded rod under the balcony. Repeat for the other side of the threaded rod (top of newel post). Tight well.
4. Install cap with caulking.

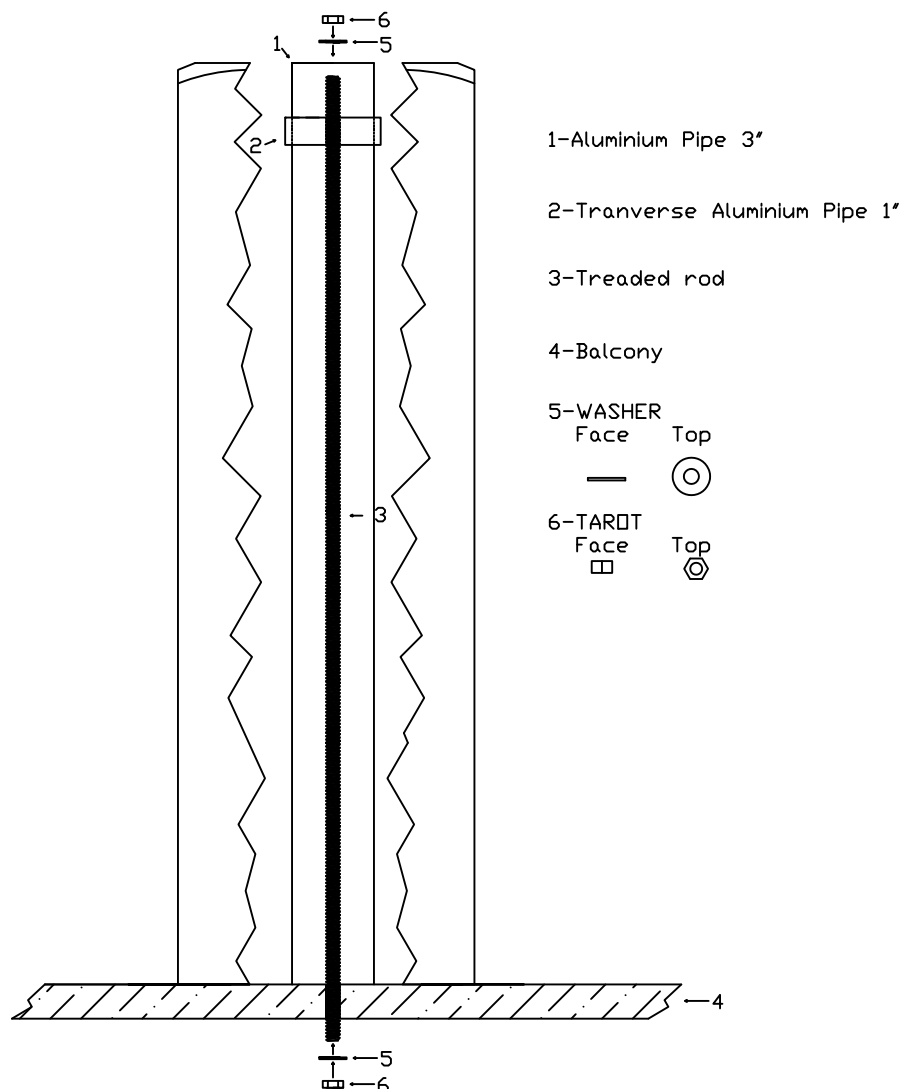

The warranty will be void if the installation instructions are not followed.