


Newel Post Installation Guide Wood Surface (INS-BS)

1. Mark the center of the location where the Newel Post will be installed. Place the base of the threaded rod (#3) and fix it to the balcony with 4 lag bolts or any other type of fastener adapted to the surface of the balcony.
2. Slide the newel post on the threaded rod (threaded rod should go through the post and the transverse aluminium pipe).
3. Place washer and screw tarot onto threaded rod. Tight well.
4. Install cap with caulking.

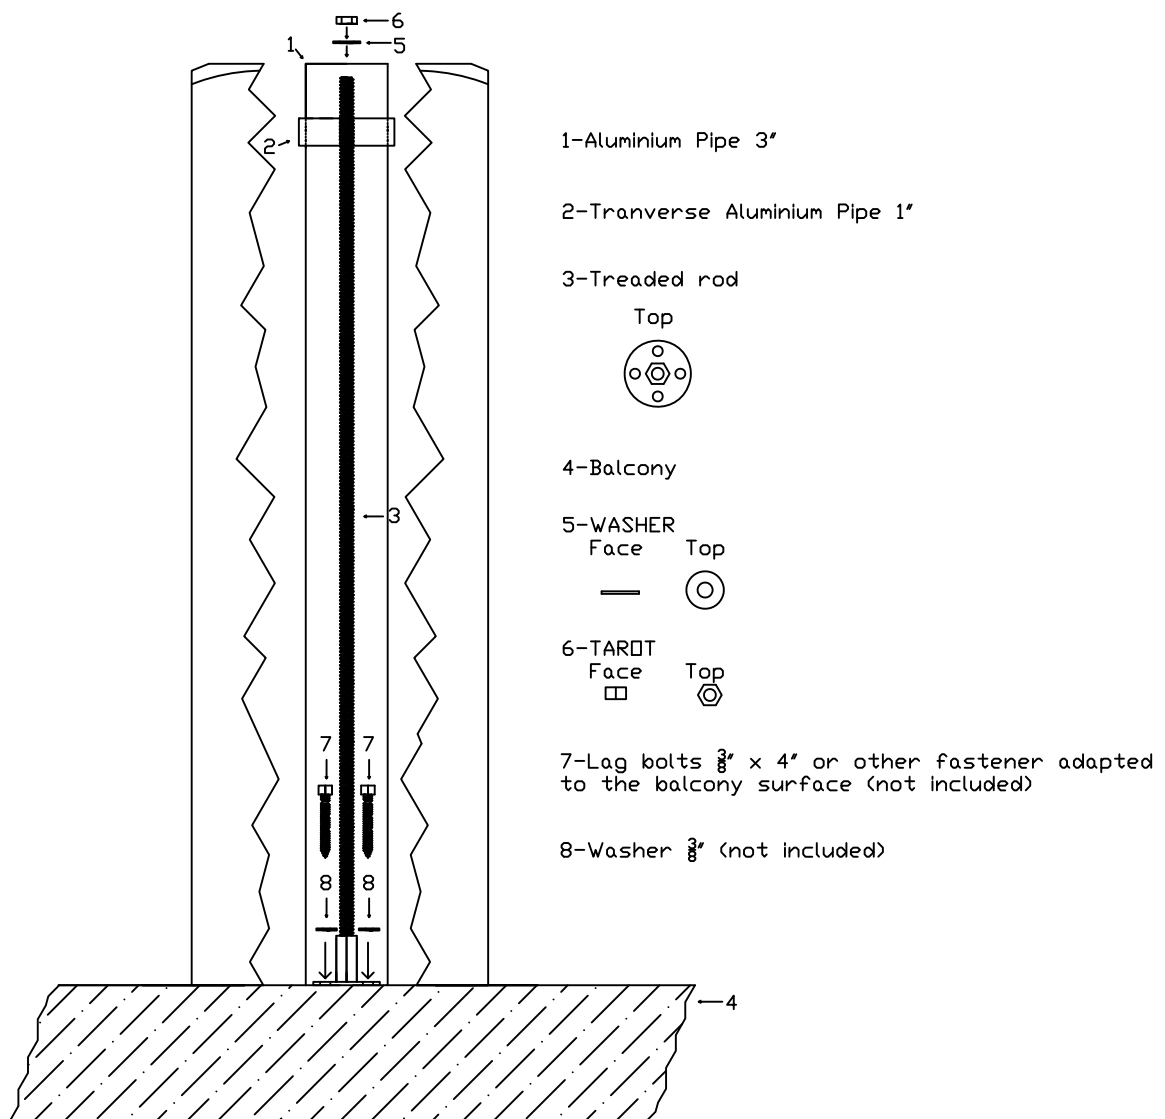

The warranty will be void if the installation instructions are not followed.